


Instruction Manual

SPECIFICATION

Type :	4WD 1/14
Length :	345mm (13.58 inch)
Width :	235 (9.25 inch)
Wheelbase :	225mm (8.97 inch)
Weight :	1.08kg (2.38 pounds)
Tire Type :	LC TRUGGY
Chassis :	2.0mm anodized aluminum
Motor :	4500KV 2850 brushless or brush motor
ESC :	Brushless or brush
Radio Control :	2.4GHz Technology
Batteries :	7.2V NiMH or 7.4V Lipo
Shock Type :	Aluminum-threaded, oil-filled,coil-over
Ball Bearings :	Complete

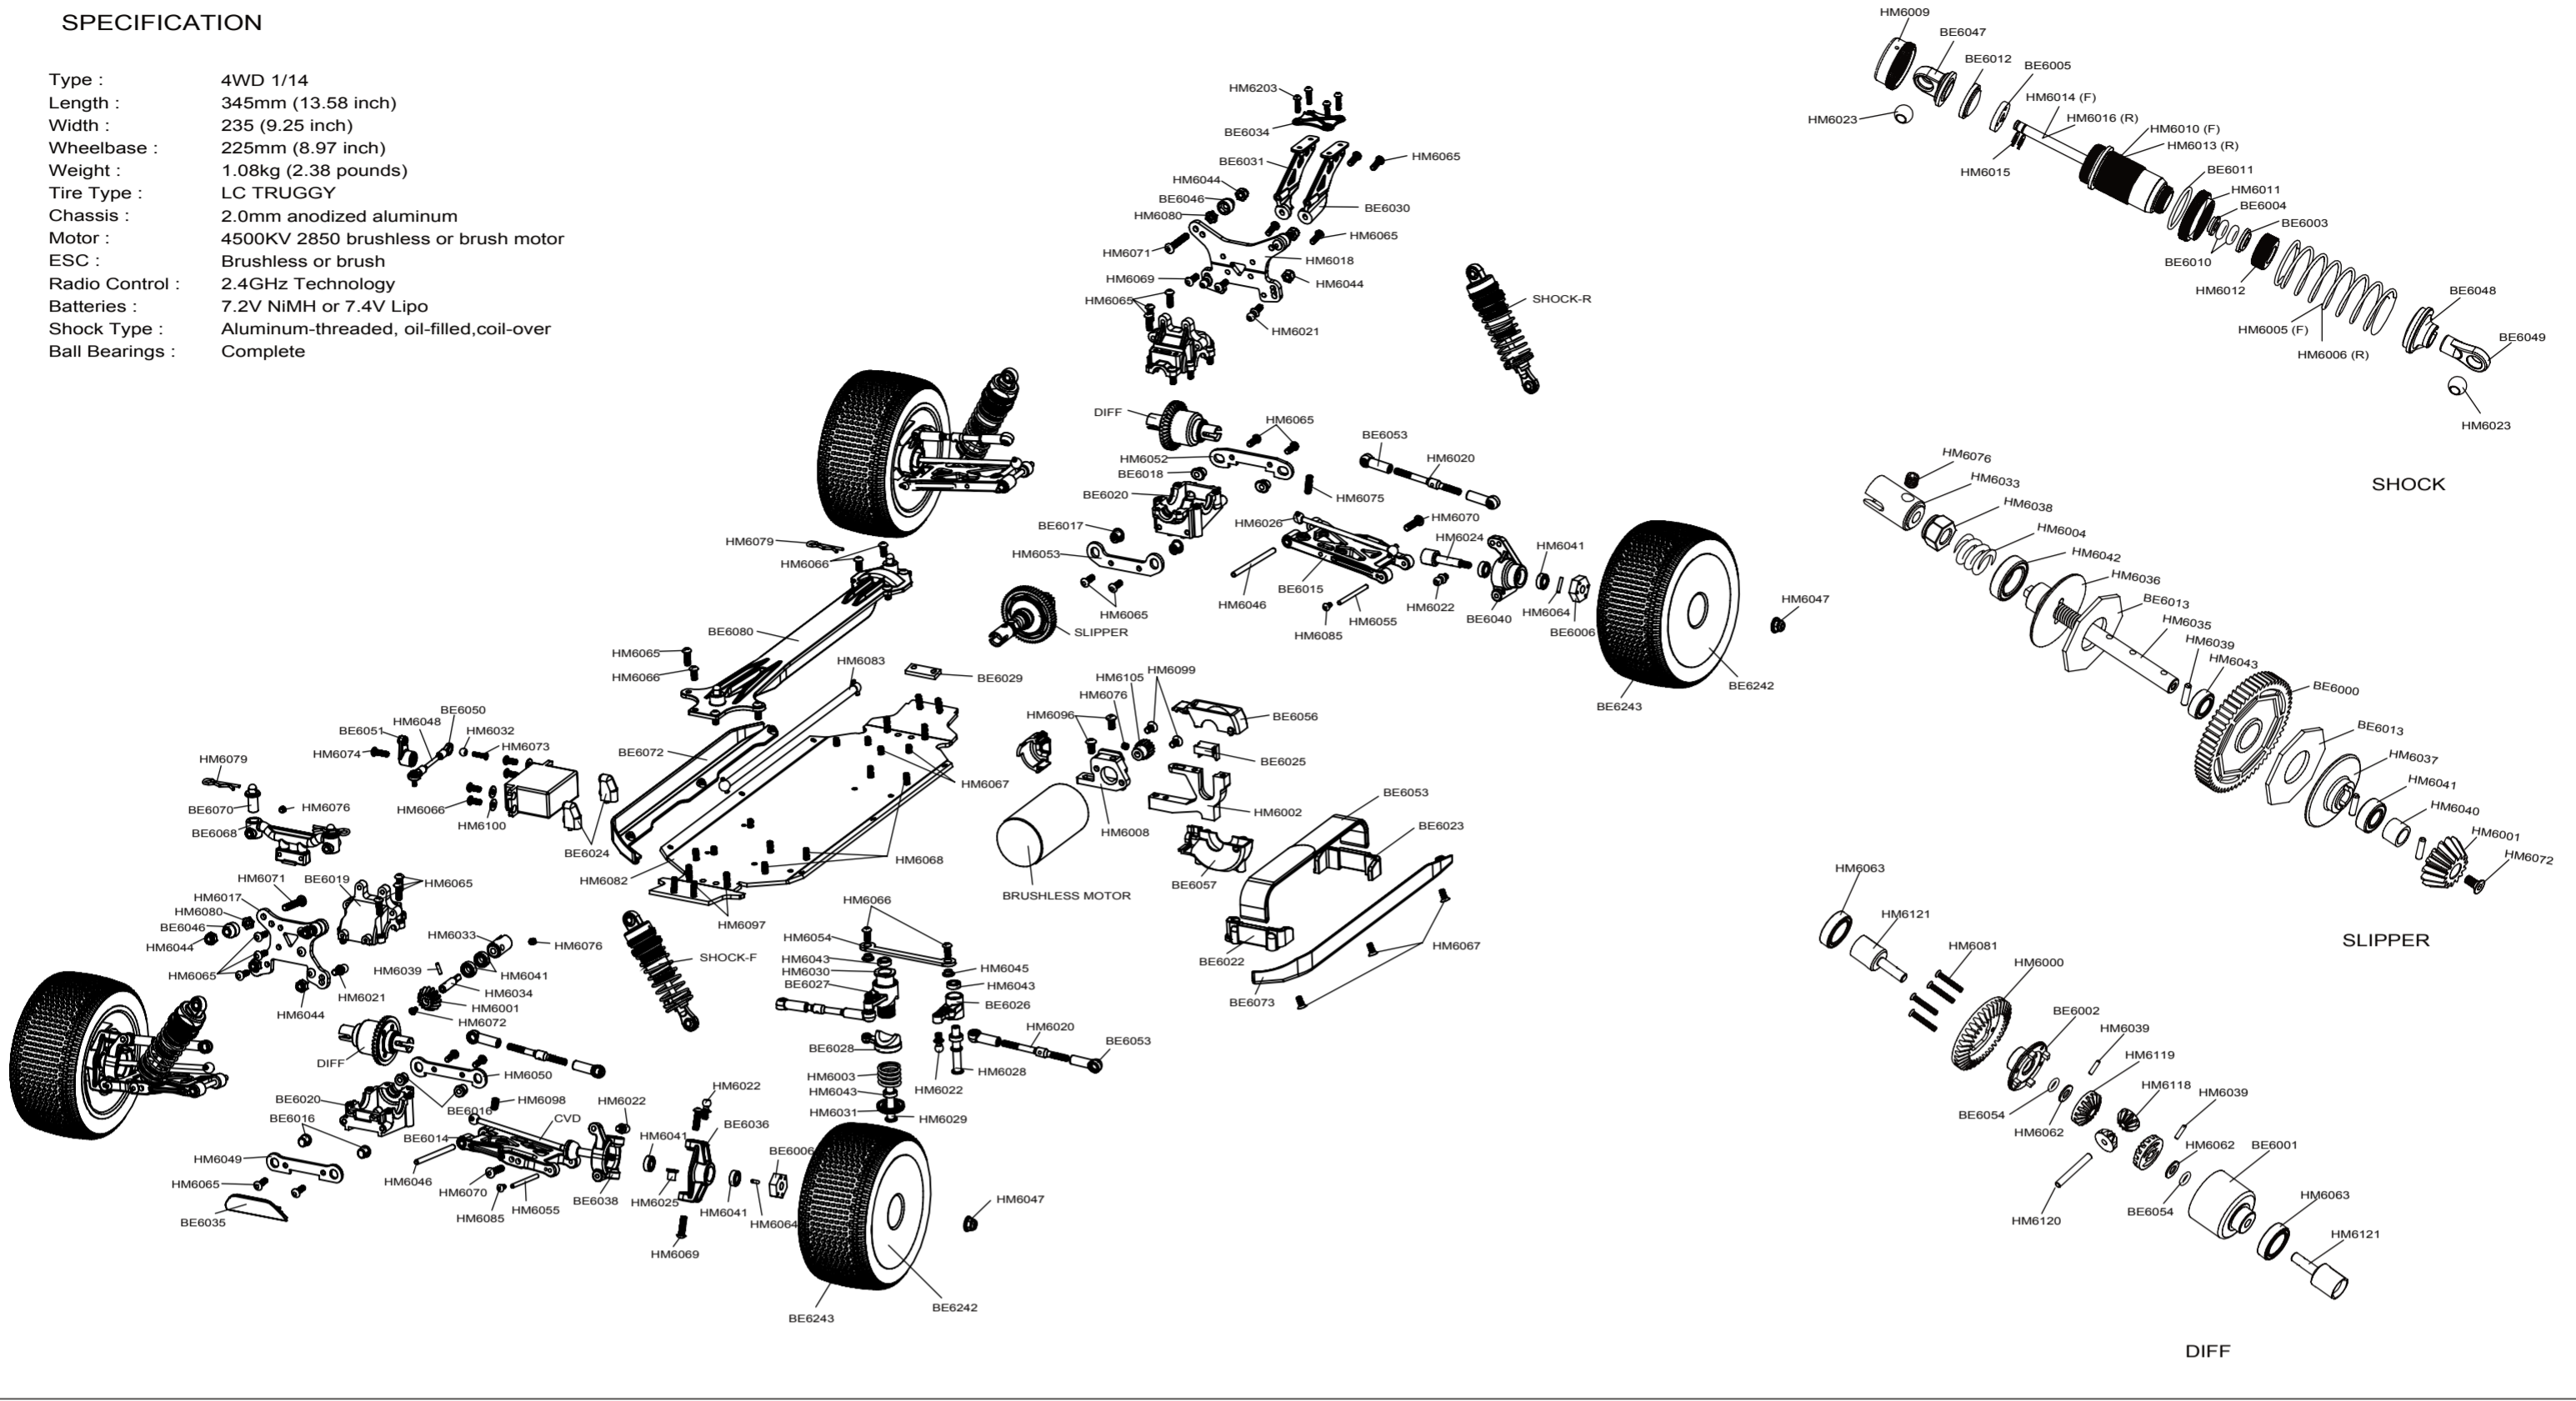

SPARE PART #	PART #	PART NAME	PART NAME	PART NAME	PART NAME	PART NAME								
(L6014)	HM6000	37T RING GEAR	(L6041)	HM6047	M3 FLANGE LOCK NUT	(L6008)	BE6022	FRONT POSITIONER MOUNT	(L6035)	BE6072	RIGHT SAFEGUARD	(L6052)	BE6122	SC BODY(CLEAR PC)
(L6014)	HM6001	15T PINION GEAR	(L6024)	HM6048	SERVO CONNECTING LINK(L6006)	(L6008)	BE6023	REAR POSITIONER MOUNT	(L6035)	BE6073	LEFT SAFEGUARD	(L6052)	BE6123	SC BODY(PVC)
(L6027)	HM6002	MOTOR MOUNT	(L6011)	HM6049	SUSPENSION MOUNT FF (L6041)	(L6008)	BE6024	SERVO MOUNT	(L6071)	BE6074	PLASTIC FRONT SHOCK TOWER	(L6024)	BE6124	DRIFT TIRES
(L6023)	HM6003	STEERING SPRING	(L6011)	HM6050	SUSPENSION MOUNT FR	(L6024)	HM6100	PW2.6X6X0.5	(L6012)	BE6075	PLASTIC REAR SHOCK TOWER	(L6061)	BE6125	MT TIRE SPONGE
(L6012)	HM6004	SLIPPER SPRING	(L6026)	HM6051	CHASSIS PLATE	(L6023)	BE6026	BELL CRANK LEFT	(L6023)	BE6076	BALANCE BAR TABLET	(L6021)	BE6126	4 HOLE SHOCK PISTON
(L6022)	HM6005	FRONT SHOCK SPRING	(L6011)	HM6052	SUSPENSION MOUNT RR	(L6023)	BE6027	BELL CRANK RIGHT UP	(L6023)	BE6077	ANTI ROLL BAR WAVE CAP	(L6075)	BE6127	SPUR GEAR 60T
(L6021)	HM6006	REAR SHOCK SPRING	(L6011)	HM6053	SUSPENSION MOUNT RF	(L6023)	BE6028	BELL CRANK RIGHT BELOW	(L6070)	BE6078	PLASTIC CHASSIS PATE	(L6076)	BE6128	PINION GEAR SHAFT
(L6021)	HM6007	DIFF OUTDRIVE	(L6023)	HM6054	STEERING PLATE	(L6020)	BE6029	REAR DIFF GEAR BOX SPACER	(L6039)	BE6079	MUD FLAP WASHER	(L6076)	BE6129	PINION GEAR SHAFT
(L6027)	HM6008	MOTOR MOUNT ADJUSTER	(L6006)	HM6055	LOWER ARM SHAFT	(L6020)	BE6030	LEFT WING MOUNT	(L6036)	BE6080	SC BRACE SPACER	(L6064)	BE6130	DT BODY(PVC)
(L6021)	HM6009	SHOCK UPPER CAP	(L6027)	HM6056	PIN 1.5X13.4	(L6020)	BE6031	RIGHT WING MOUNT	(L6070)	BE6081	PLASTIC CHASSIS PATE	(L6062)	BE6131	DT WING
(L6021)	HM6010	FRONT SHOCK BODY	(L6027)	HM6057	DIFF GEAR 10T	(L6020)	BE6032	FRONT BODY MOUNT	(L6002)	BE6082	SPONGE 75X45X25	(L6062)	BE6132	DT MOUNT LEFT
(L6021)	HM6011	SHOCK ADJUSTOR	(L6027)	HM6058	DIFF SPACER BUSH	(L6020)	BE6033	REAR BODY MOUNT	(L6001)	BE6083	SPONGE 75X45X30	(L6062)	BE6133	DT MOUNT RIGHT
(L6021)	HM6012	SHOCK BOTTOM CAP	(L6027)	HM6059	PIN 1.2X5	(L6020)	BE6034	WING BUTTON	(L6051)	BE6084	1/12OR1/14RALLY BODY(PVC)	(L6062)	BE6134	DT COCKPIT LEFT
(L6021)	HM6013	FRONT SHOCK BODY	(L6027)	HM6060	DIFF GEAR 14T	(L6020)	BE6035	FRONT BUMPER	(L6051)	BE6085	RALLY WING	(L6062)	BE6135	DT REAR SUPPORT
(L6022)	HM6014	FRONT SHOCK SHAFT	(L6015)	HM6061	PIN 1.2X4.7	(L6007)	BE6036	SPINDLE CARRIER L	(L6040)	BE6086	RALLY BUMPER	(L6062)	BE6136	DT WIND SCREEN
(L6021)	HM6015	E-RING 2.3	(L6015)	HM6062	WASHER 3X6X0.5	(L6007)	BE6037	SPINDLE CARRIER R	(L6040)	BE6088	FRONT BODY POST	(L6062)	BE6137	DT HEAD LIGHT
(L6021)	HM6016	REAR SHOCK SHAFT	(L6042)	HM6063	BEARING 8X12X3.5	(L6007)	BE6038	LEFT SPINDLE	(L6040)	BE6089	BUNPER WASHER	(L6062)	BE6138	DT TIRE RACK
(L6009)	HM6017	FRONT SHOCK TOWER	(L6016)	HM6064	PIN 1.5X8	(L6007)	BE6039	RIGHT SPINDLE	(L6004)	BE6090	RALLY TIRE	(L6062)	BE6139	DT FRONT SUPPORT
(L6009)	HM6018	REAR SHOCK TOWER	(L6041)	HM6065	TM2.6X8mm	(L6007)	BE6040	LEFT REAR HUB	(L6004)	BE6091	SHORT ARM FRONT	(L6062)	BE6140	DT ROOF RACK
(L6019)	HM6019	TURNBUCKLE L35	(L6041)	HM6066	TM2.6X8mm	(L6007)	BE6041	RIGHT REAR HUB	(L6004)	BE6092	SHORT ARM REAR	(L6062)	BE6141	DT COCKPIT MOUNT RACK
(L6031)	HM6021	4.3 BALL LONG	(L6041)	HM6067	KM2.6X8mm	(L6002)	BE6042	REAR WHEEL	(L6073)	BE6093	PLASTIC FRONT SHOCK BODY	(L6062)	BE6142	DT FRONT BUMPER CONNECT
(L6031)	HM6022	4.3 BALL SHORT	(L6041)	HM6068	KM2.6X8mm	(L6025)	BE6043	FRONT WHEEL	(L6073)	BE6094	PLASTIC REAR SHOCK BODY	(L6062)	BE6143	DT REAR BUMPER
(L6021)	HM6023	5.8 BALL	(L6041)	HM6069	TM2.6X10mm	(L6025)	BE6044	LEFT SAFEGUARD	(L6040)	BE6095	RALLY BUMPER EVA	(L6062)	BE6144	DT FRONT BUMPER
(L6017)	HM6024	AXLE	(L6041)	HM6070	TM3.0X12mm	(L6009)	BE6045	RIGHT SAFEGUARD	(L6009)	BE6096	SHORT RALLY BUMPER EVA	(L6062)	BE6145	DT FRONT BUMPER
(L6007)	HM6025	SWERVE BUSHING	(L6041)	HM6071	TM3.0X18mm	(L6021)	BE6046	SHOCK POST	(L6009)	BE6097	SHORT RALLY BODY	(L6062)	BE6146	DT FRONT BUMPER SUPPORT
(L6018)	HM6026	F MIDDLE DOGBONE	(L6041)	HM6072	KM2.0X4mm	(L6021)	BE6047	SHOCK TOP BALL CAP	(L6021)	BE6098	SHORT RALLY BODY	(L6062)	BE6147	DT REAR BUMPER CONNECT
(L6038)	HM6027	MIDDLE DOGBONE	(L6041)	HM6073	KM2.0X8mm	(L6021)	BE6048	SHOCK SPRING RETAINER	(L6021)	BE6099	SHORT RALLY WING	(L6062)	BE6148	DT REAR REINFOCER
(L6030)	HM6028	LEFT STEERING POST	(L6040)	HM6074	TM3.0X8mm	(L6021)	BE6049	SHOCK BALL END	(L6024)	BE6050	4.0mm CUP	(L6062)	BE6149	DT LAMP COVER
(L6030)	HM6029	RIGHT STEERING POST	(L6006)	HM6075	SET SCREW M3x10	(L6005)	BE6050	SPUR GEAR 60T	(L6024)	BE6051	SERVO HOM	(L6062)	BE6150	DT FRONT BUMPER CONNECT
(L6023)	HM6030	STEERING POST	(L6012)	HM6076	SET SCREW M3x3	(L6015)	BE6001	DIFF HOUSING	(L6028)	BE6052	BATTERY STRAPS	(L6062)	BE6151	DT REAR SHOCK LOW MOUNT RIGHT
(L6023)	HM6031	STEERING POST	(L6012)	HM6077	CM3.0X8mm	(L6015)	BE6002	DIFF COVER	(L6019)	BE6053	BALL CAP	(L6062)	BE6152	DT REAR SHOCK LOW MOUNT LEFT
(L6024)	HM6032	4.0 BALL	(L6041)	HM6078	TM2.0X6mm	(L6015)	BE6003	SHOCK SHAFT BUSHING	(L6015)	BE6054	O-RING 3X5	(L6062)	BE6153	DT SUPPORT MOUNT PLATE LEFT
(L6012)	HM6033	DRIVE CUP	(L6041)	HM6079	R BUTTON	(L6021)	BE6004	SHOCK BUSHING	(L6052)	BE6055	1/14 SC BODY(PVC)	(L6062)	BE6154	DT SUPPORT MOUNT PLATE RIGHT
(L6013)	HM6034	PINION GEAR SHAFT	(L6041)	HM6080	M3 NUT	(L6016)	BE6005	SHOCK PISTON	(L6060)	BE6100	2.6"6"0.5	(L6062)	BE6155	DT REAR SHOCK MOUNT RACK LEFT
(L6012)	HM6035	SLIPPER SHAFT	(L6041)	HM6081	KB1.4X10mm	(L6002)	BE6006	WHEEL HEX	(L6060)	BE6101	SPONGE 69X45X25	(L6062)	BE6156	DT REAR SHOCK MOUNT RACK RIGHT
(L6012)	HM6036	FRONT SLIPPER PAD	(L6034)	HM6082	LONG CHASSIS	(L6028)	BE6007	FRONT TIRE	(L6061)	BE6102	EVA GASKET3X5.6	(L6062)	BE6157	DT FRONT SHOCK TOWER
(L6012)	HM6037	REAR SLIPPER PAD	(L6037)	HM6083	LONG MIDDLE DOGBONE	(L6028)	BE6008	REAR TIRE	(L6061)	BE6103	ANTENNA TUBE	(L6062)	BE6158	DT REAR SUPPORT MOUNT
(L6012)	HM6038	M4 LOCK NUT	(L6081)	HM6084	MOTOR MOUNT	(L6050)	BE6009	1/14 BUGGY BODY(PVC)	(L6061)	BE6104	3.0 BUSHINGS	(L6062)	BE6159	DT REAR SUPPORT HUB
(L6012)	HM6039	PIN 1.5X6	(L6041)	HM6085	TM2.0X4mm	(L6021)	BE6010	O-RING 2.8x6.6x1.9	(L6061)	BE6105	PS OIL BOX	(L6062)	BE6160	TRUGGY TYRE
(L6012)	HM6040	SPACER BUSH	(L6041)	HM6086	TM2.0X4mm	(L6021)	BE6011	O-RING 15X13X1.0	(L6061)	BE6106	MT HUB	(L6044)	BR6002	LI-PO BATTLE
(L6012)	HM6041	BEARING 4X8X3	(L6032)	HM6087	PINION GEAR 16T	(L6006)	BE6012	FRONT SUSPENSION ARM	(L6060)	BE6107	MT REAR BUMPER MOUNT	(L6064)	TX-2	TRANSMITTE
(L6012)	HM6042	BEARING 7X11X3	(L6012)	HM6088	PINION GEAR 18T	(L6006)	BE6013	SLIPPER SHEET	(L6060)	BE6108	MT REAR BUMPER MOUNT	(L6056)	RX-2-A	RECEIVE
(L6042)	HM6043	BEARING 4X7X2.5	(L6012)	HM6089	PINION GEAR 20T	(L6006)	BE6014	FRONT SUSPENSION ARM	(L6060)	BE6109	MT TIRE	(L6047)	DT6001	ESC 35A
(L6041)	HM6044	M3 LOCK NUT	(L6012)	HM6090	PINION GEAR 22T	(L6006)	BE6015	REAR SUSPENSION ARM	(L6053)	BE6110	MT HUB	(L6048)	MR6001	BRUSHLESS MOTOR
(L6023)	HM6045	STEERING LINK BUSHING	(L6043)	HM6091	CVD DRIBE SHAFT	(L6011)	BE6016	FRONT SUSPENSION ARM ADJUSTER A	(L6050)	BE6111	MT REAR BUMPER MOUNT	(L6044)	BR6003	BRUSHLESS MOTOR
(L6006)	HM6046	HINGE PIN	(L6043)	HM6092	CVD CYLINDER	(L6011)	BE6017	SUSPENSION ARM ADJUSTER B	(L6054)	BE6112	MT REAR BUMPER MOUNT	(L6077)	MR6000	380 BRUSH MOTOR
			(L6043)	HM6093	CVD DOFBONE	(L6011)	BE6018	SUSPENSION ARM ADJUSTER C	(L6054)	BE6113	MT REAR BUMPER MOUNT	(L6078)	DT6002	BRUSH ESC 25A
			(L6043)	HM6094	CVD FIXED RING	(L6010)	BE6019	DIFF GEAR BOX UPPER HOUSING	(L6054)	BE6114	BUGGY BODY(CLEAR PC)			
			(L6043)	HM6095	PIN 1.5X8.8	(L6010)	BE6020	DIFF GEAR BOX BOTTOM HOSUSING	(L6051)	BE6115	BUGGY WING(CLEAR PC)			
			(L6041)	HM6096	TM3.0X6mm	(L6029)	BE6021	BRACE SPACER	(L6051)	BE6116	BUGGY BODY(PVC)			

TACON-RC guarantees this product to be free of manufacturing faults and material defects. This product has been checked and fine tuned individually by professional staff and quality control staff. The warranty does not cover any component parts damaged by use and modification. Please visit <http://www.taconrc.com> for updated product information.

This product is not a toy. It is not recommended for children under 14 years old and any minor should be accompanied by an adult when operating. This product is a precision machine that requires proper assembly and setup to avoid accidents. Failure to take caution when operating this product may result in serious injury or property damage. It is the owner's responsibility to operate this product in a safe manner. Manufacturer and its distributors are not responsible in any way for all and all bodily injury(s) and/or property damage that may occur from the use of or caused by in any way this product.

WARNINGS

- Do not attempt to disassemble or modify any of the product components without the assistance of an experienced RC user.
- Only use the correct type of battery to operate. Using any wrong type of battery will damage the product and possibly make it dangerous to operate.
- The motor(s) may get hot during use. Always allow 10-15 minutes between each run for the motor to cool down. This will prolong the life of your product.
- Choose an appropriate operating site consisting of flat, smooth ground, and clear open field. Do not operate near buildings, high voltage cable lines, or trees to ensure safety. RC models are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, driver error, and radio interference.
- Drivers are responsible for their actions and damage or injury occurring during the operation.

- Do not operate in inclement weather, such as rain, wind, snow and darkness.
- The product is composed of precision electrical components. It is critical to keep the product away from moisture and other contaminants. Do not allow them to get wet. Electrical damage may occur that could affect safe operation.
- After each use, always allow the battery to cool down before recharging. When charging the battery pack, do not over charge! If batteries get hot during charging, discontinue charging immediately and disconnect the battery from the charger. Never leave battery unattended while charging. If you are unsure of how to charge this battery, please seek the advice of experienced RC users. Never let children charge the battery without adult supervision.
- Always turn on the transmitter before connecting the battery on the models. When turning off the model, always disconnect the battery first, and then turn off the transmitter. If the order is reversed, the model may become uncontrollable and cause serious damage.
- If you are in doubt of your ability to operate the model, we strongly recommend that you seek assistance from experienced RC users or join your local model flying club to gain the required knowledge and skill. As the manufacturer and distributor, we assume no liability for the use of this product.
- Before turning on your model and transmitter, please check to make sure no one else is operating under the same frequency. Frequency interference can cause your model, or other's models to crash. The guidance provided by experienced RC users will be valuable for the assembly, tuning, trimming, and actual first flight.
- Never allow batteries to run low or you might lose control of the model.
- You should complete a successful pre-run check of your radio equipment and model prior to each run.
- Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Do not store the model near any source of heat such as over or heater. Store the model indoors, in a climate-controlled, room temperature environment.

- ### Charge the battery pack
- Disconnect the battery from the charger when the charging process completed. Do not charge the battery unattended at all time.
- ### Lithium Polymer (LiPo) Battery Warning
- Never charge a lithium polymer battery with a charger designed for NiCd, NiMH, or any other type of battery chemistry. Use ONLY charger designed for LiPo Battery.
 - Do not leave LiPo battery unattended during charging.
 - Do not overcharge the battery.
 - Always place the battery on a heat resistant surface alone when charging.
 - Always put the LiPo battery inside a charging protection container while charging.
 - Do not allow LiPo cells to overheat at any time. Cells which reach greater than 140 Fahrenheit(60°C) will usually become damaged and will catch fire.
 - Do not allow LiPo cells on or near combustible materials including paper, plastic, carpets, vinyl, leather, and wood, inside an R/C model or full size automobile.
 - Do not over discharge LiPo; doing so will damage the battery.
 - Do not expose LiPo cell to water or moisture at any time.
 - Do not store battery near open flame or heater.
 - Do not assemble LiPo cells or pre-assembled packs together with other LiPo cells or packs.
 - Always store LiPo battery in secure location away from children.
 - Always remove the LiPo battery if model is involved in any kind of crash. Carefully inspect the battery and connectors for even the smallest damage. CAUTION: cells may be hot!
 - Do not allow the electrolyte to get into eyes or on skin. Wash affected areas immediately if they come into contact with electrolyte. Do not alter or modify connectors or wires of a LiPo battery pack.
 - Always inspect the condition of the battery before charging and operation.
 - Do not short circuit the LiPo battery.
 - Do not have contact with a leaky/damaged battery directly.
 - Do not charge battery out of recommended temperature rang (0°C-45°C)